



## Small Frame Turbos

BTR Part No.	Compressor Wheel		Turbine Wheel		Turbine Housing		Bearing
	Inlet	Outlet	Inlet	Outlet	Style	A/R	Style
BTR-6466-1232-96	64	86	74	66	V-band	0.96	Dual BB
BTR-6766-1132-96	67	88	74	66	V-band	0.96	JB
BTR-6766-1232-96	67	88	74	66	V-band	0.96	Dual BB
BTR-6870-1112-96	68	92	78	70	T4	0.96	JB
BTR-6870-1212-96	68	92	78	70	T4	0.96	Dual BB
BTR-7875G3-1112-125	78	102	82	75	T4	1.25	JB
BTR-7875G3-1132-128	78	102	82	75	V-band	1.28	JB
BTR-7875G3R-1132-128 <i>Rev Rotation</i>	78	102	82	75	V-band	1.28	JB
BTR-7875G3-1212-125	78	102	82	75	T4	1.25	Dual BB
BTR-7875G3-1232-128	78	102	82	75	V-band	1.28	Dual BB
BTR-7875G3R-1232-128 <i>Rev Rotation</i>	78	102	82	75	V-band	1.28	Dual BB



## BTR S400 Turbos

BTR Part No.	Compressor Wheel		Turbine Wheel		Turbine Housing		Bearing
	Inlet	Outlet	Inlet	Outlet	Style	A/R	Style
BTR-8088-2122-132	80	110	96	88	T6	1.32	JB
BTR-8088-2132-131	80	110	96	88	V-Band	1.31	JB
BTR-8888-2122-132	88	110	96	88	T6	1.32	JB
BTR-8888-2132-131	88	110	96	88	V-Band	1.31	JB
BTR-8892-2122-132	88	110	102	92	T6	1.32	JB
BTR-9192-2122-158	91	133	102	92	T6	1.58	JB



## BTR GT55 Turbos

BTR Part No.	Compressor Wheel		Turbine Wheel		Turbine Housing		Bearing
	Inlet	Outlet	Inlet	Outlet	Style	A/R	Style
BTR-94102-3122-124	94	133	112	102	T6	1.24	JB
BTR-98102-3122-124	98	133	112	102	T6	1.24	JB
BTR-94102-3222-124	94	133	112	102	T6	1.24	Triple BB
BTR-94102-3232-141	94	133	112	102	V-Band	1.41	Triple BB
BTR-98102-3222-124	98	133	112	102	T6	1.24	Triple BB
BTR-98102-3232-141	98	133	112	102	V-Band	1.41	Triple BB



## BTR G57 Turbos

BTR Part No.	Compressor Wheel		Turbine Wheel		Turbine Housing		Bearing
	Inlet	Outlet	Inlet	Outlet	Style	A/R	Style
BTR-88112-4232-125	88	133	118	112	V-Band	1.25	Triple BB
BTR-94112-4232-125	94	133	118	112	V-Band	1.25	Triple BB
BTR-98112-4232-125	98	133	118	112	V-Band	1.25	Triple BB
BTR-102112-4232-125	102	144	118	112	V-Band	1.25	Triple BB
BTR-106112-4232-125	106	144	118	112	V-Band	1.25	Triple BB